



**INTERNATIONAL**  
**FLOORCOVERINGS**  
**A U S T R A L I A**

# Suvi

## SCANDINAVIAN DESIGNER WOVEN VINYL

Suvi designer woven vinyl is produced in Finland. Suvi designer woven vinyl offers a very versatile design alternative to the run of the mill vinyl floorcoverings. They are produced to the highest standards to cope with all types of commercial, outdoor and residential situations, see below.

### SUVI DOMESTIC

**Hallway, Kitchen, Balcony,  
Bathroom, Patios, Boats etc**

Suvi can be used both indoors and outdoors. Suvi is soft and pleasant under your feet. It is especially suitable for humid conditions. It dries up quickly and does not mould, It is easy to keep clean as its surface repels water and dust.

### SUVI COMMERCIAL

**Banks, Hotels, Shops, Offices,  
Schools, Kindergartens, Fitness  
Centres, Health Care areas etc**



Suvi is a comfortable, practical solution for these types of commercial areas. It provides an excellent sound and thermal insulation, and comes with a **CRF of 6.8kw/m<sup>2</sup>** so is fire rated for all building areas. Suvi vinyl also comes with an anti slip rating of R10.

Suvi can also be cut in any direction because it is run proof. This offers endless options for the designer in floor design and patterns.

### SUVI FLOOR RUGS

**Custom made to any size or shape**

By using our fabulous range of binding fabrics – Jute, Cotton, Leather, Tapestries for internal use or by using our new range of totally synthetic bindings. This makes Suvi a perfect solution for outside area floor rugs.

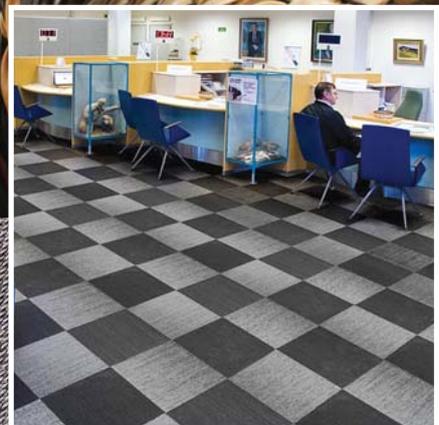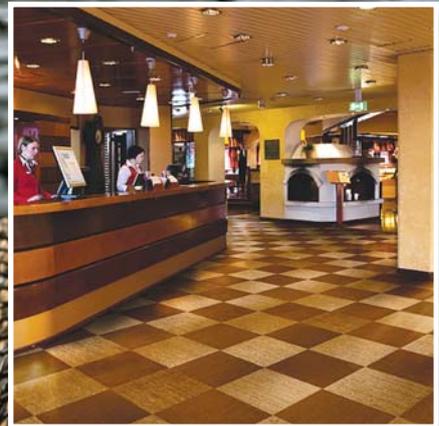

SUVI DESIGNER WOVEN VINYL



# Suvi Care and Cleaning

## IMMEDIATELY AFTER INSTALLATION

Protect and do not disturb the sealed seams for at least 48 hours. Keep traffic to a minimum on the entire surface to allow the adhesive to harden.

Do not place furniture on the floor until the adhesive has had adequate time to dry.

Always move heavy furniture and appliances with care to avoid gouging or tearing the floor.

Lay plywood panels on the floor and slide the heavy objects on the panels.

Allow 48 hours for the seam sealer or the adhesive to totally dry, then mop your floor to remove any dirt that may have been tracked in during installation.

## REGULAR MAINTENANCE

Sweep or vacuum regularly to remove dirt.

Using a vacuum with a roller brush is best for removing trapped dirt from the texture of Suvi Flooring.

Wipe up spills promptly to avoid stains.

Wash your floor as needed with a mop and warm water.

For a more thorough cleaning use soft brushes.

Clean flooring with a neutral solution or a slightly alkaline solution by rubbing with a soft brush.

Rinse with water after alkaline solution is used.

Do not use dish washing liquids or detergent soap cleaners as they can leave a sticky residue, which attracts soil and causes a reduction of gloss.

## HOW TO TREAT STAINS AND SPILLS

Stains and spills such as acids, alkalis, blood, tomato sauce, mustard, cleaners, strong soaps, dye, dye markings, food, candy, fruit and fruit juices, paint, grass, iodine, rust, urine:

1. Blot up excess at once.
2. Rub lightly with a cloth dipped in mineral spirits if wet.
3. If paint is dried, gently peel it from the floor.
4. Clean area with water.

Stains that won't wipe up such as adhesives, asphalt, chewing gum, oil, grease, candle wax, tar:

1. Remove excess with a dull kitchen knife.
2. Rub lightly with mineral spirits on a clean cloth.
3. Clean area with water.

## INSTALLING SUVI WOVEN VINYL

- Prepare and level the sub-floor as you would for any direct stick vinyl installation.
- Roll the material out and cut it in roughly so that it is flat, but leave the seams over lapped.
- Pull back one half of each width either side of the join and spread the adhesive following the manufacture's instructions. Leave a gap of 15cm either side of the join free of adhesive.
- Drop both sides of the vinyl on to the adhesive and then use a heavy roller to roll the vinyl into the adhesive, this will ensure a good bond is achieved.
- When the main body of the installation is glued to the floor, double cut the seams just like any normal vinyl.
- Open up the seam in lengths of 2 metres at a time and repeat the gluing process. When you have glued the second run of 2 metres, go back and roll the first 2 metres of joining, again ensuring a good bond is achieved. Repeat this process until seam is completed.
- **Cold weld** all seams using Werner Muller type 'A' PVC cold weld liquid, or Polymer 400 vinyl seam sealer, available from MJS ph: 1800 677 758.

## RECOMMENDED ADHESIVES & COVERAGE

- Woven Suvi Vinyl: Outdoor areas, Mapei G19; Indoor areas Mapei Ultra Bond ECO 350.
- Most adhesives will give you approximately 2 square metres to 1 litre of adhesive but this depends on the sub-floor surface.
- If you have any doubts at all about the absorbency of the sub-floor use a floor sealer (see adhesive manufacturer's specifications) prior to installation.

## Showrooms

### SYDNEY

2 Hordern Place, Camperdown NSW 2050

### BRISBANE

2/787 Kingsford Smith Drive, Eagle Farm QLD 4009

### GOLD COAST

3/16 Harvest Court, Southport QLD 4215

### MELBOURNE

310a Bay Road, Cheltenham VIC 3192

**Australia wide: 1800 339 379**

### AUCKLAND

Home Ideas Centre, The Strand, Parnell NZ

**New Zealand: 0800 862 377**

**[www.interfloors.com.au](http://www.interfloors.com.au)**